

## FEATURES (Not required for operation)

---


### AM/FM Band Button:

To receive FM signals, push this button. To set to AM, push this button again. The "AM" or "FM" and "ST" (stereo signal reception only) will be visible in the display. "ST" lights up when an FM station in stereo is being received. As FM stereo reception becomes weaker, special circuits in the radio gradually blend the sound toward mono to maintain some sound quality, even though the ST indicator remains ON. Stereo reception is available only for FM stereo broadcasts, not for AM.

### SEEK/SCAN Select Button:

Use this button to select either SEEK or SCAN mode in auto tuning. The indicator "SCAN" will be visible in the display when the button is set to SCAN. When the button is set to SEEK, the indicator "SCAN" will disappear, and no indication will appear in the display.

Refer to the topic under Search Lever for operation in SEEK and SCAN modes (page 61).

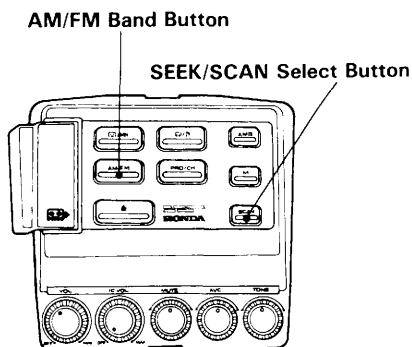

Indicator

**SCAN**