

## FEATURES (Not required for operation)

---

### Eject Button:

The cassette is ejected from the deck when this button is depressed.

### NOTE:

- Repeatedly opening and closing the cassette lid without loading a cassette tape may cause the cassette lid to remain closed when the eject button is depressed. If the lid doesn't open, wait several seconds and try again.

### Power Switch/Volume Control Knob:

Turn this knob clockwise to apply power to the radio. The display will indicate "AM" or "FM". Push the radio/cassette button to hear the cassette tape. The display will change to "▶" or "◀" when the deck is loaded with a tape. Turning the knob further increases the volume.

### Tape Program Direction Button:

This deck features auto-reverse play, so that both sides of the tape can be played without turning the cassette over. This switch can be used to change the direction of the tape. The indicator in the display will be changed as shown below.

