


Common Functions Between AM/FM Radio and Cassette Deck

Muting Switch:

Switching the Mute switch ON instantly lowers the radio's volume so you may hear surrounding sound more clearly. The display will indicate "MUTE." Switching Mute OFF restores the original volume.

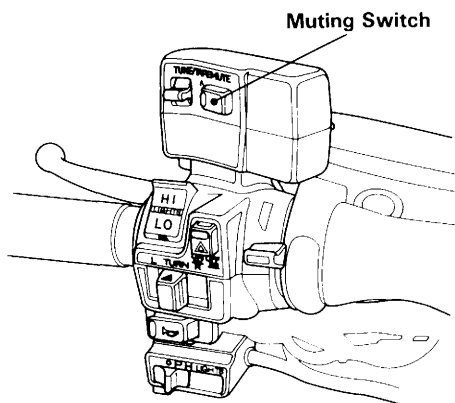


Indicator

MUTE

Ambience button (AMB):

The "ambience" circuit blends and boosts certain frequencies from both channels, for a "live performance" effect. To use the circuit, push the ambience (AMB) button until "AMB." appears in the display. AMB is usable for stereo programs from both tape and FM. The ambience circuit, however, may make weak FM stereo signals or poorly recorded tapes sound worse.

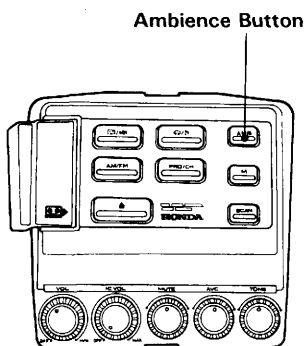

Indicator

AMB.