

Fast-forward and Rewinding Buttons:

This deck features auto-reverse play, so that both sides of the tape can be played without turning the cassette over.

Push either button to fast-forward or rewind depending on the correct direction of the tape indicated by the arrows on the display. The indicator blinks during fast winding. Push the program selector (PRO) to stop the tape.

Fast-forward and Rewinding Buttons

