

ITEM	FREQUENCY	WHICH-EVER COMES FIRST	ODOMETER READING (NOTE 1)							Refer to page
			x 1,000 km							
			x 1,000 mi							
			MONTHS							
	FINAL DRIVE OIL				I		I		R	119
	BATTERY		I	I	I	I	I	I	I	129-130
	BRAKE FLUID	NOTE 4		I	I	R	I	I	R	21-22
	BRAKE PAD WEAR			I	I	I	I	I	I	127
	BRAKE SYSTEM		I		I		I		I	21-22
*	BRAKE LIGHT SWITCH				I		I		I	—
*	HEADLIGHT AIM				I		I		I	53
	CLUTCH SYSTEM				I		I		I	—
	CLUTCH FLUID	NOTE 4		I	I	R	I	I	R	23
*	REVERSE OPERATION				I		I		I	—
	SIDE STAND				I		I		I	128
*	SUSPENSION				I		I		I	—
*	CRUISE VALVE ELEMENT								R	—
*	AIR PUMP ELEMENT						C			—
*	AIR DRIER				I		I		I	—
*	NUTS, BOLTS, FASTENERS		I		I		I		I	—
**	WHEELS/TYRES				I		I		I	—
**	STEERING HEAD BEARINGS		I		I		I		I	—

- * SHOULD BE SERVICED BY AN AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SHOP MANUAL.
- ** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY YOUR AUTHORIZED HONDA DEALER.

Honda recommends that your authorized Honda dealer should road test your motorcycle after each periodic maintenance is carried out.

- NOTES:
1. At higher odometer readings, repeat at the frequency interval established here.
 2. Service more frequently when riding in unusually wet or dusty areas.
 3. Service more frequently when riding in rain, or at full throttle.
 4. Replace every 2 years, or at indicated odometer interval, whichever comes first. Replacement requires mechanical skill.