

-
2. Disconnect the spark plug caps.
 3. Clean any dirt from around the spark plug bases.
 4. Remove and discard the spark plugs.
 5. Make sure the new spark plug gap is 0.8–0.9 mm (0.031–0.035 in) using the 0.8 mm feeler gauge provided in the tool kit or a wire-type feeler gauge. If adjustment is necessary, bend the side electrode carefully.
 6. With the plug washers attached, thread the new spark plugs in by hand to prevent cross-threading.
 7. Tighten the spark plugs 1/2 turn with a spark plug wrench to compress the washer.
 8. Reinstall the spark plug caps.

CAUTION:

- ***The spark plugs must be securely tightened. An improperly tightened plug can become very hot and possibly damage the engine.***
- ***Never use a spark plug with an improper heat range. Severe engine damage could result.***
- ***When installing body parts, do not pinch any cables or wires.***

