
FINAL DRIVE OIL

Refer to the Maintenance Precautions on page 108.
Change the oil as specified in the maintenance schedule.

NOTE:

- Change the oil with the final drive at normal operating temperature and the motorcycle upright on firm, level ground to assure complete and rapid draining.

1. To drain the oil, remove the oil filler cap and drain plug.
2. After the oil has completely drained, check that the sealing washer on the drain plug is in good condition and install the drain plug.

Drain Plug Torque:

20 N·m (2.0 kg-m, 14 ft-lb)

3. Fill the final drive with approximately 170 cm³ (5.7 US oz, 6.0 Imp oz) of the recommended oil. Make sure the final drive oil level is slightly lower than the lower edge of the inspection hole.
4. Install the oil filler cap.

Recommended oil: HYPOID GEAR OIL SAE 80

