




FEATURES

(Not required for operation)


Input Jack Setup

The auxiliary input jack connector is located under the left fairing pocket. To use it:

1. Attach a cloth to the cover and remove the cover with care using a flat-tip screwdriver.
2. Open the left fairing pocket cover and remove the clips and grommet A.
3. Lift out the fairing pocket.

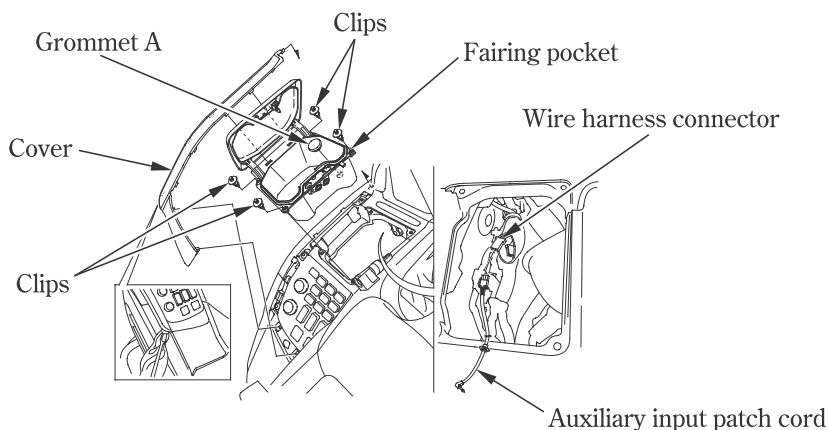

4. Plug the auxiliary input patch cord into the wire harness connector.
5. Route the auxiliary input patch cord through the hole in the bottom of the fairing pocket.
6. Install the grommet B to left fairing pocket.
Do not pull on the auxiliary cord as the wires could be damaged.

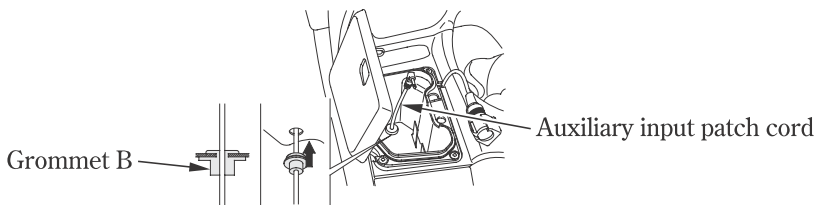

Some portable audio systems may pick up noise from the ignition. Adjust the volume of the portable audio system so that it is about the same level as the GL's radio volume. If the volume of the portable audio system is set too high, the sound coming out from the speakers or headset may be distorted.

