




Main Fuse:

4. Check the main fuses (A & B/External Amplifier fuse) to see if they are blown.

To replace main fuses (A & B/External Amplifier fuse), see your dealer for this service.

Circuit Fuses:

5. To check or replace a circuit fuse, pull the old fuse out of its retaining clips with the fuse remover. Look for a burned wire inside the fuse. If the fuse is blown, replace it with a spare fuse the same rating or lower.

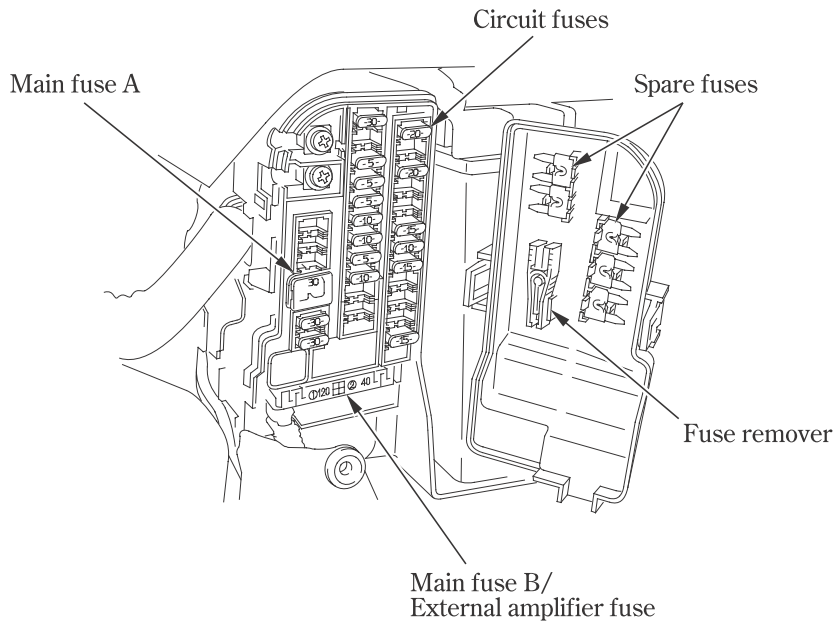

6. Close the fuse box cover.
7. Install the left side cover.

