


Starting the Engine

Ignition Switch



To start the engine, turn the ignition switch to the "RUN" position (red-dot). To shut off the engine, turn the switch to either "OFF" position (black-dot).

Fuel Valve

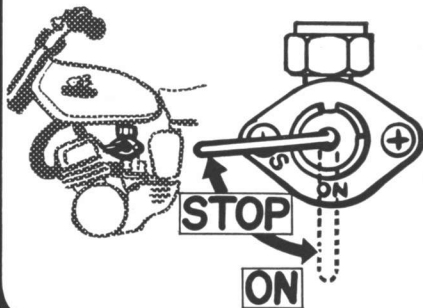

Before starting the engine, move the fuel valve control lever to the "ON" position. After shutting the engine OFF, always move the lever to "S" position.