


Removing & Installing Body Components

Seat

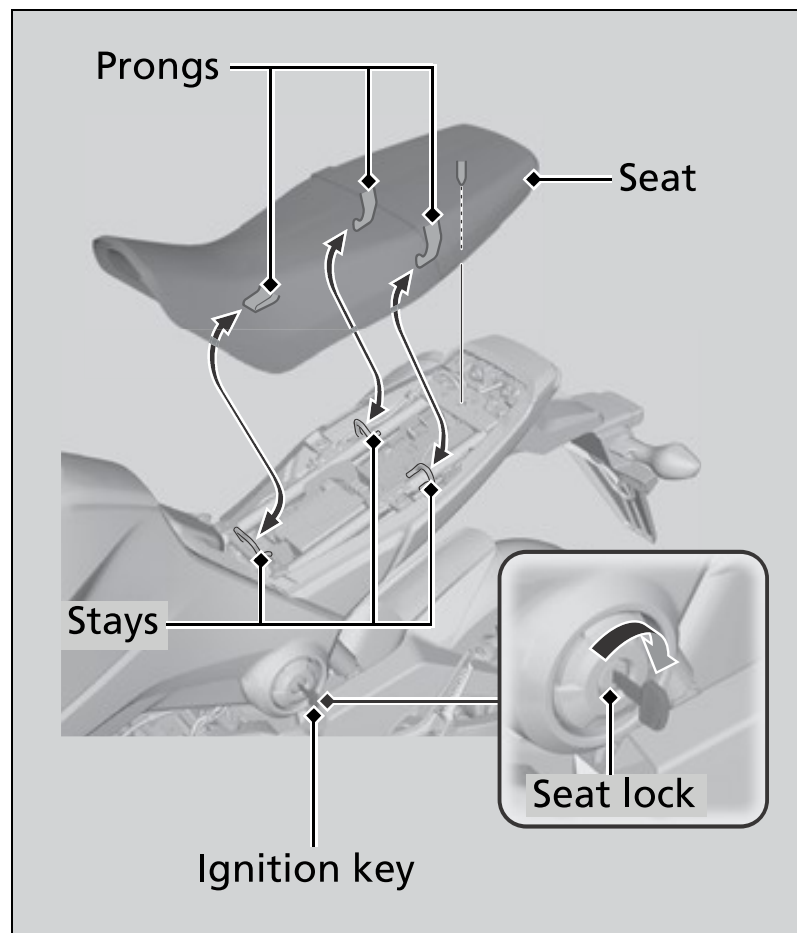

Removal

1. Insert the ignition key into the seat lock.
2. Turn it clockwise, then pull the seat up and back.

Installation

1. Insert the prongs into the stays on the frame.
 2. Push forward and down on the rear of the seat until it locks in place.
Make sure that the seat is locked securely in position to pull it up lightly.
- The seat locks automatically when closed.
Take care not to lock your key under the seat.