



STARTING THE ENGINE

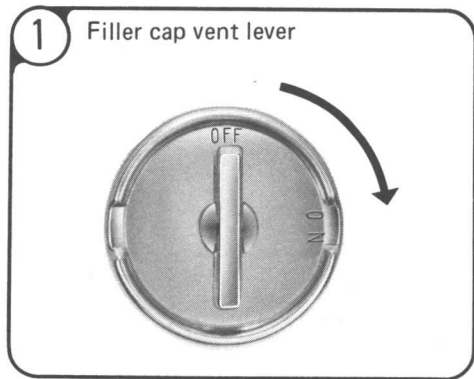

Turn the fuel filler cap vent lever to the "ON" position.

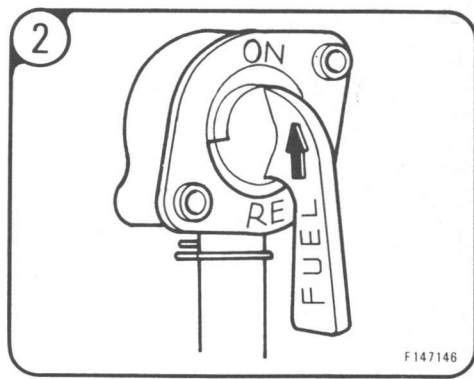

Turn the fuel valve lever to the "ON" position.