 
 


2 To set the clock:


- ① After backlight brightness adjustment, the hour digits start flashing.
- ② Press B button until the desired hour and AM/PM are displayed.
▶ Press and hold to advance the hour fast.



- ③ Press A button. The minute digits start flashing.



- ④ Press B button until the desired minute is displayed.
▶ Press and hold to advance the minute fast.

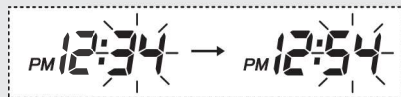

5 (Except III E type)

Press A button. The clock is set, and then the display returns to the backlight brightness adjustment.

(III E type only)

Press A button. The clock is set, and then the display moves to the changing of the speed and mileage unit.

3 (III E type only) Changing the speed and mileage unit:

- ① After clock setting, the speed and mileage unit start flashing.
- ② Press B button to select either "km/h" and "km" or "mph" and "mile".
- ③ Press A button. The speed and mileage unit is set, and then the display returns to the backlight brightness adjustment.

