

Indicators



Low oil pressure indicator

Comes on when the ignition switch is turned on.
Goes off when the engine starts.
If it comes on while engine is running: ➔ P.95



ABS (Anti-lock Brake System) indicator (NC700SA/SD only)

Comes on when the ignition switch is turned on.
Goes off when your speed reaches approximately 10 km/h (6 mph).
If it comes on while riding: ➔ P.96





High coolant temperature indicator

If it comes on while riding: ➔ P.94



PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)

Comes on briefly when the ignition switch is turned on with the engine stop switch in the RUN  position. Comes on when the ignition switch is turned on with the engine stop switch in the OFF  position.

If it comes on while engine is running: ➔ P.95

