

## Shifting Gears (Continued)

### Changing between Neutral and AT/MT

#### Changing from Neutral (N) to AT MODE

Press the D/S side of the N-D switch (①). The D mode indicator comes on, "1" is shown in the gear position indicator and first gear is selected.

#### Changing from AT or MT MODE to Neutral

Press N on the N-D switch (②).

#### Changing between D mode and S mode while in AT MODE

Press the D/S side of the N-D switch. The S or D mode indicator comes on (③, ④).

#### Changing between AT MODE and MT MODE

Press the AT/MT switch (⑤).

The S or D indicator goes out while MT MODE is selected (⑥).

