


Removing & Installing Body Components ► Lower Cowl

(NC700SD)

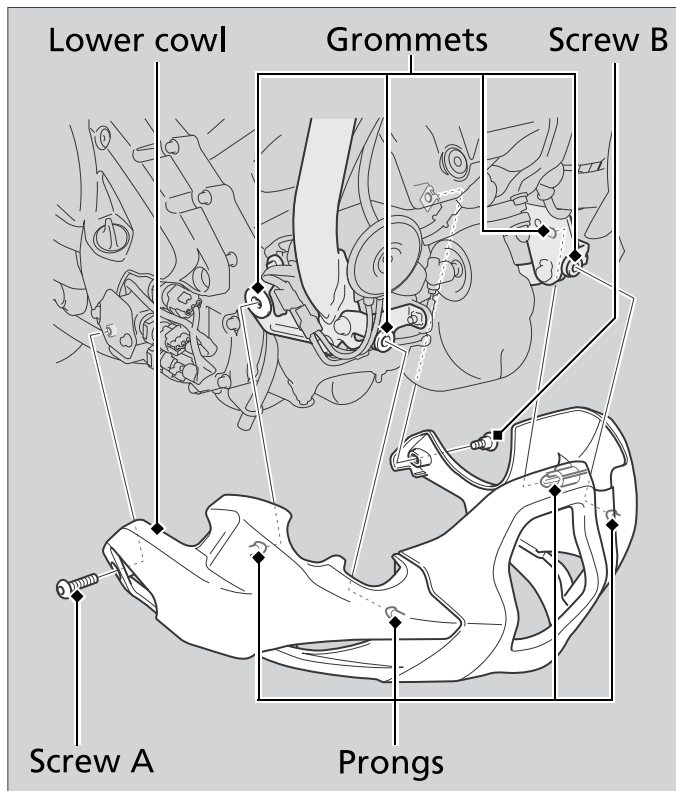

The lower cowl must be removed to service the coolant reserve tank, to replace the engine oil filter and clutch oil filter.

Removal

1. Remove the screw A and B.
2. Remove the lower cowl, then remove the prongs from the grommets.

Installation

Install the parts in the reverse order of removal.

Maintenance