


Electrical Trouble ► Blown Fuse

Main Fuse

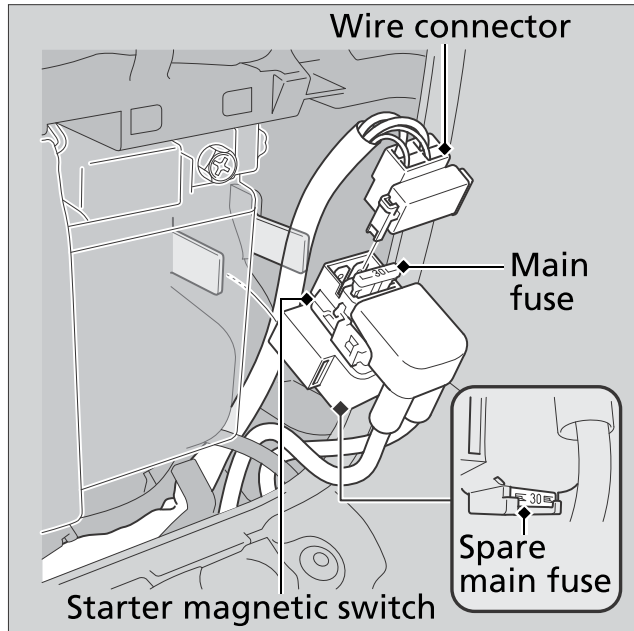

1. Open the luggage box. ► P. 44
2. Remove the maintenance lid. ► P. 65
3. Disconnect the wire connector of the starter magnetic switch.

4. Pull the main fuse out with the fuse puller in the tool kit and check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
► Spare main fuse is provided in the starter magnetic switch.
5. Reinstall parts in the reverse order of removal.

NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your motorcycle inspected by your dealer.

Troubleshooting