

Symptom	Check	Remedy
Idle stop is not functioned	Is the throttle opened ?	The idle stop system will not function if the throttle is opened . The throttle is closed.
	Has the scooter been run after it was stopped last?	The idle stop system will not function if the scooter has not been run at speed above 10 km/h after starting the engine last. Ride the scooter once again.
	Is the rider seated in the seat in proper posture?	The idle stop system will not function if the seat is not loaded with weight properly. Sit in the seat in proper posture.