

## STARTING THE ENGINE

Always start the scooter as follows.


This scooter is equipped with a cut out system which blocks start up if the side stand is in the down position.

This scooter is equipped with an automatic starter and an auto cock, so no manual operations are necessary.

1. Place the scooter on its center stand.
2. Turn the ignition switch (1) to "ON".

### **⚠ WARNING**

- **Never run the engine in a closed area. The exhaust contains poisonous carbon monoxide gas that can cause loss of consciousness and lead to death.**

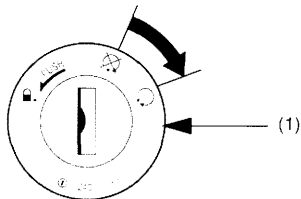

(1) Ignition switch