

3. Lock the rear wheel by applying the brake lock lever (1).

⚠ WARNING

- **The rear wheel will spin if not restrained by the brake or contact with the ground. Accidental contact with a spinning wheel could cause death or injury.**

NOTE:

- Electric starter will work when the brake lever is squeezed and side stand is up.



- (1) Rear brake lever
(2) Starter button

4. With the throttle closed, push the starter button (2). Release the starter button as soon as the engine starts.

NOTE:

- Do not use the electric starter for more than 5 seconds at a time. Wait for about 10 seconds before pressing the starter button again.

