


Engine oil strainer screen

Engine oil quality is the chief factor effecting the life of the engine. Change the oil as specified in the maintenance schedule (page 70).

NOTE:

- Change the oil with the engine at normal running temperature and the scooter on its stand to assure complete and rapid draining.

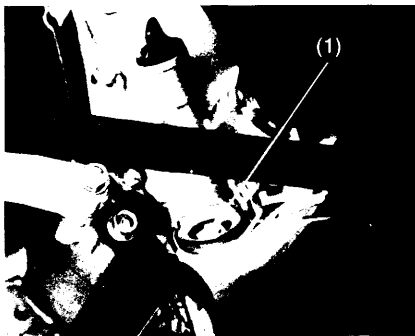


(1) Drain plug

1. Remove the oil filler cap from the right crankcase cover.
2. Place an oil pan under the crankcase and remove the oil drain plug (1).

NOTE:

- The spring (2) and the oil filter grill (3) come away when the drain cap is removed (1).
3. Check that the oil strainer screen, sealing rubber and drain plug O-ring are in good condition.

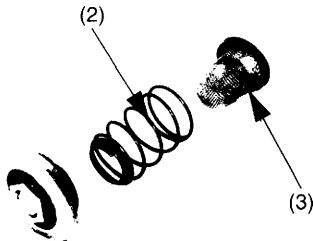

(2) Spring (3) Oil filter grill