


Removing the battery:

1. Remove the lower center cover (page 43).
2. Remove the battery support locking screws (1).
3. Disconnect the negative (-) terminal cable (3) then the positive one (+)(4).
4. Pull out the battery (5) from its container.

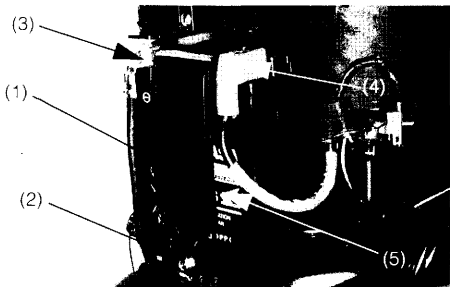

- (1) Battery container cover
- (2) Screws
- (3) Negative terminal cable (-)
- (4) Positive terminal cable (+)
- (5) Battery