


## CHANGING FUSES

(Refer to the maintenance precautions on page 75).

When frequent fuse failure occurs it usually means a short circuit or an overload in the electrical system. See your Honda dealer for repairs.

### BROKEN FUSE

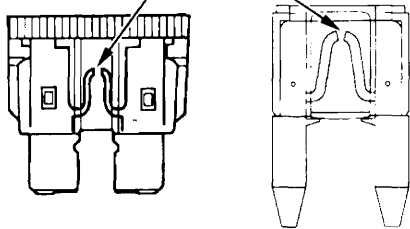

### CAUTION

- Turn the ignition switch **OFF** before checking or changing fuses to prevent accidental short circuiting.

### ⚠ WARNING

- Never use a fuse with a different rating from that specified. This may cause serious damage to the electrical system or fire, causing a dangerous loss of lights or engine power.