


**Fuse box:**

The fuse box is positioned behind the central cover on the right of the battery.

**The specified fuses are:**

**10A x 4, 15A x 1**

1. Remove the central lower cover (page 43).
2. Open the fuse box cover (1).
3. Take out the broken fuse and put in the new one. The spare fuses are in the fuse box.
4. Close the fuse box cover and reinstall the central cover.

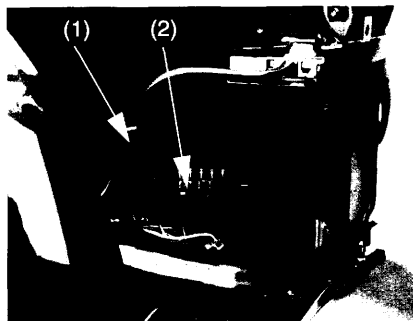

- (1) Fuse box  
(2) Spare fuses