

## CLEANING

Clean your scooter regularly to protect its surface finish and check for damage, wear, oil of brake fluid leaks.

### CAUTION

- **Water (or air) at high pressure may damage certain parts of the scooter.**

Avoid spraying high pressure water (typical in car washes) on the following parts:

- Wheel hubs
- Ignition switch
- Carburetor
- Brake master cylinder
- Instruments
- Handlebar switches
- Muffler outlet
- Under seat
- Air cleaner

1. After cleaning, rinse the scooter thoroughly with clean water as strong detergent can corrode alloy parts.

### NOTE:

- Clean the plastic parts using a cloth or sponge dampened with a solution of mild detergent and water.
- Clean windshield with soft cloth or sponge and plenty of water. Dry with soft clean cloth. Remove minor scratches with commercially available plastic polishing compound. Replace wind-shield if scratches cannot be removed and they obstruct clear vision.
- The inside of the headlight lens may be clouded immediately after washing the motorcycle. Moisture condensation inside the headlight lens will disappear gradually by lighting the headlight in high beam. Run the engine with the headlight on.