

TYRES

Maintaining proper tyre pressure will provide maximum traction, stability, riding comfort and tyre life.

See your authorized Honda dealer for repair or replacement of tyres.

Pressure Check

Check tyre pressures frequently with a pressure gauge and adjust if necessary.

NOTE:

- * Tyre pressure should be checked before you ride, while the tyres are “cold”.

| |
|---|
| Tyre Pressures |
| Front: 150 kPa (1.50 kg/cm ² , 21 psi) |
| Rear: 250 kPa (2.5 kg/cm ² , 36 psi) |
| Tyre Sizes |
| Front: 3.50-10-4PR |
| Rear: 3.50-10-4PR |

WARNING

- * **Improper tyre inflation will cause abnormal tread wear and create a safety hazard. Underinflation may result in the tyre slipping on, or coming off of the rim causing tyre deflation that may result in a loss of vehicle control.**