

(Ref.No.) Description	Function
<p>(14) Low oil level/ pressure indicator (red)</p>	<p>Lights when the engine oil level is less than specified capacity or engine oil pressure is below normal operating range. Should light when ignition switch is ON and engine is not running. Should go off when the engine starts, except for occasional flickering at or near idling speed when engine is warm.</p> <p>If the indicator lights while riding, stop the engine and check the engine oil level. Read pages 22 – 23 and do not ride the motorcycle until the problem has been corrected.</p> <p>NOTICE</p> <p>Running the engine with insufficient oil level or oil pressure may cause serious damage to the engine and transmission.</p>
<p>(15) Anti-lock Brake System (ABS) indicator (amber)</p>	<p>This indicator normally comes on when the ignition switch is turned ON, and goes off after you ride the motorcycle at speed above 10 km/h (6 mph). If there is a problem with the Anti-lock Brake System, this indicator flashes and remains on (page 105).</p>