

Digital Clock


Shows hour and minute.

This motorcycle is able to detect the engine oil level. If the system can not read the engine oil level for long periods, the digital clock (1) will change to the OIL-check display (page 29).

To adjust the time, proceed as follows:

1. Turn the ignition switch ON.

2. Push and hold both the SEL button (2) and RESET button (3) for more than 2 seconds. The clock will be set in the adjust mode with the hour display flashing.

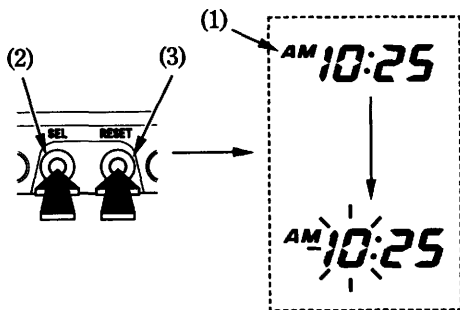

- (1) Digital clock
- (2) SEL button
- (3) RESET button