

OIL-Check Display:

If the ignition switch is turned ON while the motorcycle is on a slope, and it is tilted up or down to the front, back, or either side, the engine oil level may not be accurately detected. This also applies when the side stand is down and the ignition switch is ON. Before you turn the ignition switch ON, make sure to put the side stand up and place your motorcycle upright position on level ground.

If you keep riding your motorcycle for more than 2,500 km (1,553 miles) in the condition where the engine oil level cannot be detected properly, the digital clock changes to the blinking "OIL" (1) display.

If this happens, turn OFF the ignition switch, park in a safe place and check the engine oil level immediately (page 40).

If the engine oil level is low, add engine oil (page117).

Then reset the OIL-check display (page 30).

