

Switching Between Neutral and Automatic Shift Mode or 6-speed Manual Mode

When you operate the N-D shift switch (1), make sure as follows:

- Your motorcycle is stopped.
 - The engine is running.
 - The throttle is fully closed.
- If the throttle is opened while switching the HFT between neutral and the D mode, the engine will stop.

The HFT can only be switched between neutral and the D mode when idling.