


Front Turn Signal Bulb


The right and left turn signal bulb replacement can be done in the same way.

1. Pull back the rubber dust cover (1).
2. Disconnect the connector (2).
3. Remove the rearview mirror assembly (3) by removing the bolts (4) and washers.

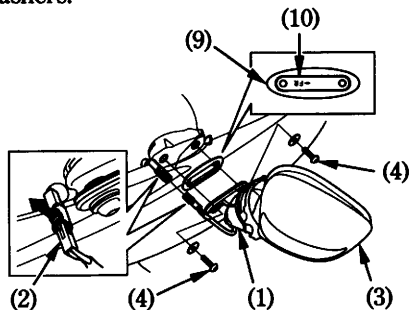

- | | |
|------------------------------|-----------------|
| (1) Rubber dust cover | (4) Bolts |
| (2) Connector | (9) Metal plate |
| (3) Rearview mirror assembly | (10) Arrow mark |

4. Remove the screws (5) and pull out the mirror (6).

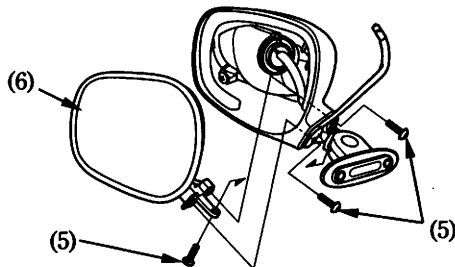

- | | |
|------------|------------|
| (5) Screws | (6) Mirror |
|------------|------------|