

Ref. No.	Description	Function
(6)	Coolant temperature gauge	Shows coolant temperature. (see page 13).
(7)	Fuel gauge	Shows approximate fuel supply available (see page 14).
(8)	Neutral indicator	Lights when the transmission is in neutral.
(9)	Turn signal indicator	Flashes when either turn signal is operated.
(10)	High beam indicator	Lights when the head light is on high beam.
(11)	Tripmeter	Shows mileage per trip.
(12)	Tripmeter reset knob	Resets tripmeter to zero (0) by turning the knob in direction shown.