

### Installation notes :

Reverse the removal procedure.

Position the front wheel between the fork legs and insert the axle shaft from left side, through the left fork leg and wheel hub.

Tighten the axle nut to the specified torque.

Axle nut torque:

59 N.m (6.0 kgf.m, 43 lbf.ft)

After installing the wheel, apply the brake several times and then check if the wheel rotates freely.

Recheck the wheel if the brake drags or if the wheel does not rotate freely.

### **WARNING**

- **If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead loss of braking capacity.**