

## FUEL


### Fuel Tank

The fuel tank is located under the step board.

The fuel tank capacity including the reserve supply is:

12.0 ℓ (3.17 US gal , 2.64 Imp gal)

To open the fuel tank lid (1), open the console box (2) (page 101). Push the fuel lid opener (3).

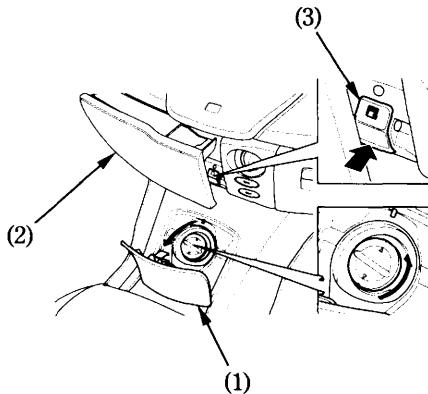

- (1) Fuel tank lid
- (2) Console box
- (3) Fuel lid opener