

Fuse Box:

The fuse boxes are located under the seat.


The specified fuses are:

10 A, 15 A, 20 A ...NSS250X


10 A, 15 A, 20 A, 30 A ...NSS250EX

1. Open the front seat (page 93) and remove the mat (page 135).
2. Remove the battery cover (page 162).
3. Open the fuse box covers (1).
4. Pull out the old fuse and install a new fuse. The spare fuses (2) are located in the fuse box.
5. Close the fuse box covers and reinstall the remaining parts in the reverse order of removal.

(NSS250X)

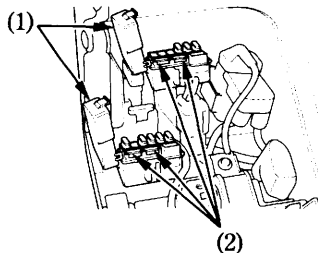

(NSS250EX)

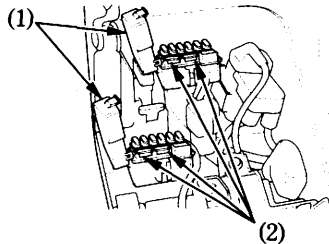

- (1) Fuse box covers
(2) Spare fuses