

FUEL

Fuel Tank


The fuel tank is located under the step board.

The fuel tank capacity including the reserve supply is:

12.0 ℓ (3.17 US gal , 2.64 Imp gal)

To open the fuel tank lid (1), open the left console box (2) (page 109). Push the fuel lid opener (3).

Close the left console box.

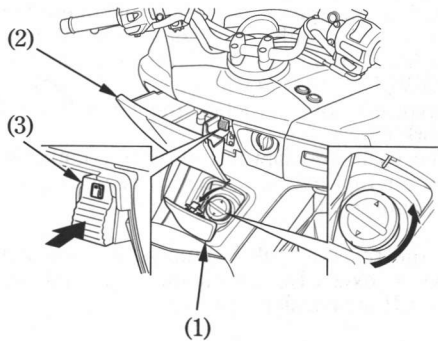

- (1) Fuel tank lid
- (2) Left console box
- (3) Fuel lid opener