

SEAT

Front seat

If the ignition switch is ON position, front seat will not open.

The seat lock release button (1) is located on the rear meter panel. Make sure that the Honda smart card key is ON (page 63) and enter the operating range with the card key. To lift the front seat (2), press the seat lock release button while the ignition switch is in the OFF or LOCK position. Pull up the front seat.

To lock the front seat, lower and push down on it until it locks.


Make sure the front seat is closed securely. (NSS250A)

If not closed, the trunk light will remain lit if the trunk light switch is I (ON), resulting in battery discharge.

Do not place luggage or clothing near the seat catch (3). It could make the seat

difficult to open if it gets caught between the seat hook and catch while closing the seat.

Do not put the card key, mechanical key and ID tag in the center compartment. The card key, mechanical key or ID tag may be locked in the compartment and the card key system may not be activated.

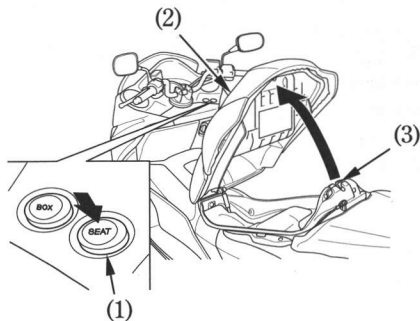

- (1) Seat lock release button (3) Seat catch
(2) Front seat