


SIDE COVER

To remove the right and left side covers (1), pull out the prongs (3) and then gently pull the side cover forward to release the tab (2).

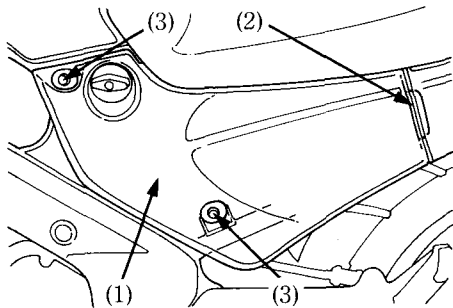

(1) Side cover
(2) Tab

(3) Prongs