

MAINTENANCE

Page

| | |
|----|---|
| 51 | MAINTENANCE |
| 52 | Maintenance Schedule |
| 55 | Tool Kit |
| 56 | Serial Numbers |
| 57 | Colour Label |
| 57 | Maintenance Precautions |
| 58 | Engine Oil |
| 62 | Crankcase Breather |
| 63 | Spark Plugs |
| 65 | Throttle Operation |
| 66 | Idle Speed |
| 67 | Final Drive Oil |
| 68 | Wheel Removal |
| 73 | Front and Rear Suspension Inspection |
| 74 | Brake Pad Wear |
| 76 | Side Stand |
| 77 | Battery |
| 79 | Fuse Replacement |
| 82 | Stoplight Switch Adjustment |

Page

| | |
|----|-----------------------|
| 83 | CLEANING |
| 85 | STORAGE GUIDE |
| 85 | Storage |
| 87 | Removal from Storage |
| 88 | SPECIFICATIONS |