

WHEEL REMOVAL


(Refer to the maintenance precautions on page 57).

NOTE:

- * This motorcycle is equipped with a side stand only. Therefore, if front or rear wheel removal is required, it will be necessary to raise the center of the motorcycle with a jack or other firm support. If none is available, see your authorized Honda dealer for this service.

Front Wheel Removal

1. Raise the front wheel off the ground by placing a support block under the engine.
2. Disconnect the speedometer cable (1) by removing the speedometer cable set screw (2).
3. Remove the brake caliper mount bolts (3) and the brake caliper (4).

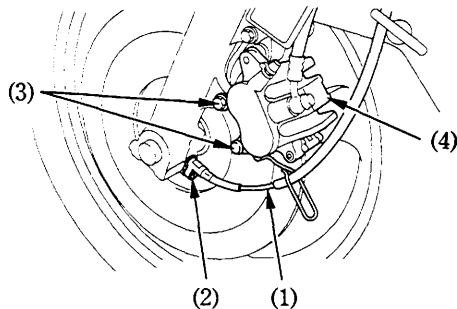

- (1) Speedometer cable
- (2) Speedometer cable set screw
- (3) Brake caliper mount bolts
- (4) Brake caliper