

## TYRES

Proper air pressure will provide maximum stability, riding comfort and tyre life.

Check tyre pressure frequently and adjust if necessary.

### NOTE:

\* Tyre pressure should be checked before you ride while the tyres are "cold".

On/off-road tyres are standard on this model. Select the right replacement tyre in accordance with the following specifications.

Check the tyre for cuts, imbedded nails or other sharp objects. See your authorized Honda Dealer for replacement of damaged tyre or punctured inner tubes.

		Front	Rear
Tyre size		90/100-19 55P	120/90-16 63P
Cold tyre pressures kPa (kg/cm <sup>2</sup> , psi)	Rider only	150 (1.5, 22)	150 (1.5, 22)
	Rider and one passenger	150 (1.5, 22)	175 (1.75, 25)
Tyre brand BRIDGESTONE DUNLOP		TW39 K460	TW40 K460