


FUSE REPLACEMENT

(Refer to the maintenance precautions on page 51, 52).

The main fuse (1), located behind the right side cover, is 20 A.

The fuse box (6) is near the seat lock. The specified fuses are 10 A and 15 A.

When frequent fuse failure occurs, it usually indicates a short circuit or an overload in the electrical system. See your authorized Honda dealer for repair.

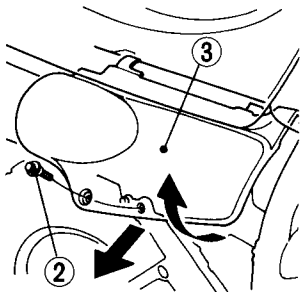


(2) Bolt

(3) Right side cover

CAUTION:

* **Turn the ignition switch OFF before checking or replacing fuses to prevent accidental short-circuiting.**

To replace the main fuse (1), remove the seat (page 34), bolt (2) and right side cover (3), disconnect the wire connector (4) of the stator magnetic switch and pull out the old fuse. Install a new fuse and reconnect the connector.

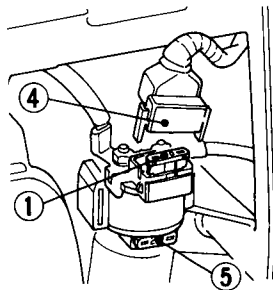

(1) Main Fuse

(4) Wire Connector

(5) Spare fuse