

ITEMS	FREQUENCY	WHICHEVER → COMES FIRST ↓	ODOMETER READING [NOTE (1)]									Refer to pages
			x 1,000 km	1	6	12	18	24	30	36		
			x 1,000 mi	0.6	4	8	12	16	20	24		
NOTE	MONTH		6	12	18	24	30	36				
DRIVE CHAIN	NOTE (5)		EVERY 1,000 km (600 mi) I, L									59-63
DRIVE CHAIN SLIDER				I	I	I	I	I	I	I	60	
BRAKE FLUID	NOTE (6)			I	I	R	I	I	R		13-16	
BRAKE PAD WEAR				I	I	I	I	I	I		71-72	
BRAKE SYSTEM			I		I		I		I		13-16,71	
* BRAKE LIGHT SWITCH					I		I		I		76	
* HEADLIGHT AIM					I		I		I		-	
CLUTCH SYSTEM			I	I	I	I	I	I	I		-	
SIDE STAND					I		I		I		66	
* SUSPENSION					I		I		I		64-65	
* NUTS, BOLTS, FASTENERS	NOTE (5)		I		I		I		I		-	
** WHEELS/TYRES	NOTE (5)		I	I	I	I	I	I	I		-	
** STEERING HEAD BEARINGS			I		I		I		I		-	

* SHOULD BE SERVICED BY YOUR AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SHOP MANUAL.

** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY YOUR AUTHORIZED HONDA DEALER.

NOTES:

- (1) At higher odometer readings, repeat at the frequency interval established here.
- (2) Service more frequently when riding in unusually wet or dusty areas.
- (3) Service more frequently when riding in rain or at full throttle.
- (4) Switzerland, Germany and Austria type only.
- (5) Service more frequently when riding OFF-ROAD.
- (6) Replace every 2 years, or at indicated odometer interval, whichever comes first. Replacement requires mechanical skill.