

## OPERATION

### PRE-RIDE INSPECTION

For your safety, it is very important to take a few moments before each ride to walk around your scooter and check its condition. If you detect any problem, be sure you take care of it, or have it corrected by your Honda dealer.

#### **WARNING**

Improperly maintaining this scooter or failing to correct a problem before riding can cause a crash in which you can be seriously hurt or killed.

Always perform a pre-ride inspection before every ride and correct any problems.

1. Engine oil level—add engine oil if required (page 22). Check for leaks.
2. Fuel level—fill fuel tank when necessary (page 19). Check for leaks.
3. Front and rear brakes—check operation and if necessary, adjust free play (pages 16–18).
4. Tyres—check condition and pressure (pages 23–28).
5. Throttle—check for smooth opening and full closing in all steering positions.
6. Lights and horn—check that headlight, tail/brake light, turn signals, indicators and horn function properly.