

5. Install the oil strainer screen, spring and drain plug.

Oil Drain Plug Torque:

20 N·m (2.0 kgf·m , 14 lbf·ft)

6. Fill the crankcase with the recommended grade oil; approximately:

0.8 ℓ (0.8 US qt , 0.7 Imp qt)

7. Reinstall the oil filler cap/dipstick.
8. Start the engine and let it idle for 3–5 minutes.
9. Stop the engine and wait 2–3 minutes.
Check that the oil level is at the upper level mark on the dipstick with the scooter upright on firm, level ground.
Make sure there are no oil leaks.