


## Headlight Bulb

1. Remove the front upper cover (page 39 ).
2. Remove the dust cover (1).
3. Remove the socket (2) by turning counterclockwise.
4. Remove the bulb (3) by pressing in and turning counterclockwise.
5. Install a new bulb in the reverse order of removal.
  - Install the dust cover with its "TOP" mark facing up.

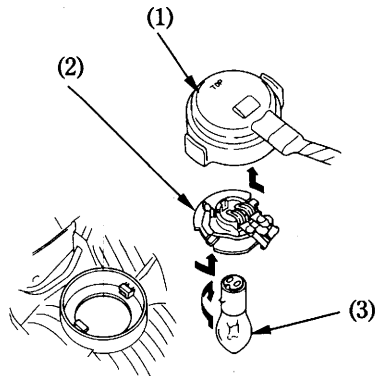

(1) Dust cover  
(2) Socket

(3) Headlight bulb