


OPERATING INSTRUCTIONS

Speedometer/Tachometer

Speedometer and tachometer are mounted on the headlight case. Their respective functions are shown in the table.

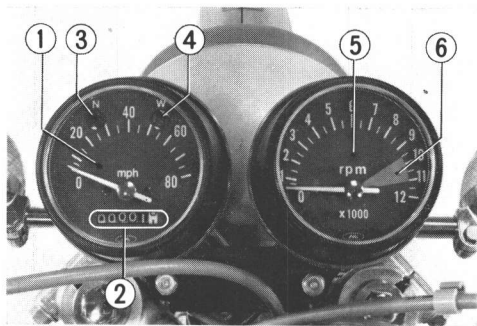

Ref. No.	Description	Function
1	Speedometer	Indicates driving speed.
2	Odometer	Indicates total accumulated distance travelled.
3	Neutral indicator light (green)	Light will be on when the transmission is in neutral.
4	Turn signal indicator light (amber)	Light will flash, when turn signal lights are operating.
5	Tachometer	Indicates engine RPM.
6	Tachometer-RED ZONE	The motorcycle should not be operated in the red zone for long time and should not be operated beyond it.