


This switch is intended primarily as a safety or emergency switch and normally remains in the "ON" position.

The ignition will not operate unless the main switch is in the "ON" position.

---

### Headlight Control/Beam Selector Switch

Move the headlight control switch ③ to "ON" position to turn on the headlight. Positioning the headlight beam selector

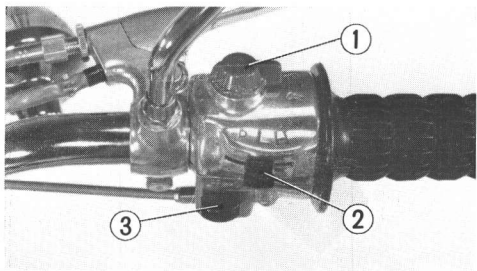


- ① Emergency switch
- ② Beam selector switch
- ③ Headlight control switch

switch ② to the "L" position will light low beam, and switching to the "H" position will light high beam. "P" is the position light position.

---

### Turn Signal Control/Horn Switch

For making a left turn, move the turn signal control switch ② to "L" position, and to "R" when making a right turn.

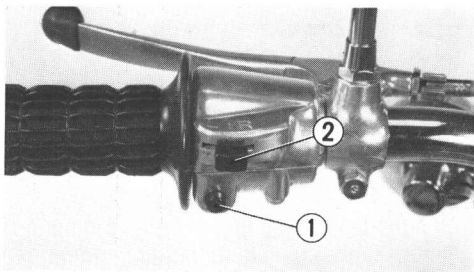

- ① Horn button
- ② Turn signal control switch