


Helmet Holder

Helmet holder ① eliminates carrying your helmet when parking. The holder can be locked to prevent theft.

1. Unlock the holder with the main switch key ②.
2. Hang your helmet on the holder pin ③ and push the pin to lock. This action automatically locks the helmet holder.

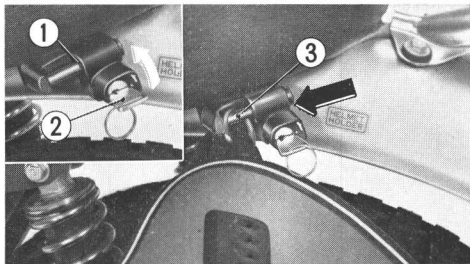


- ① Helmet holder ③ Holder pin
② Main switch key

Fuel Valve

The fuel valve ① is mounted on the left under side of the fuel tank.

“S” position

When the fuel valve is turned to the “S” position, fuel cannot flow from the fuel tank to the carburetor. Set the valve in this position whenever the motorcycle is not in use.

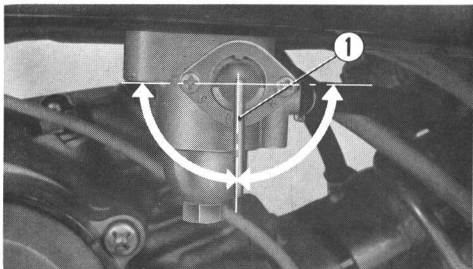

- ① Fuel valve