



2. Disconnect the lower end of the clutch cable from the clutch lever.
3. Remove the kick starter pedal and step bar.
4. Loosen the right crankcase cover mounting screws and remove the crankcase cover and cover gasket.
5. Loosen the four screws from the oil filter rotor cover, remove the cover and clean any sludge from the center of the filter rotor ①.
6. Reassemble in the proper order all part

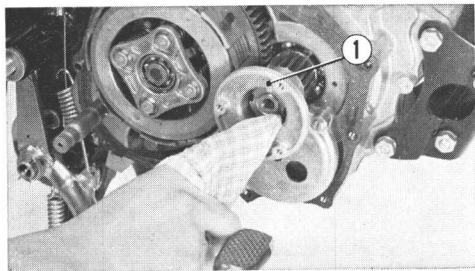

① Oil filter rotor

which have been removed. If the crankcase cover gasket is damaged, replace it with a new item.

7. Remove the screen filter for cleaning by unscrewing the filter cap ② located at the bottom of the engine on the left side. Wash the screen filter ③ in solvent or gasoline and then reinstall.
8. Upon completing the servicing of the filters, readjust the clutch by referring to the section on the clutch adjustment on page 37~38.

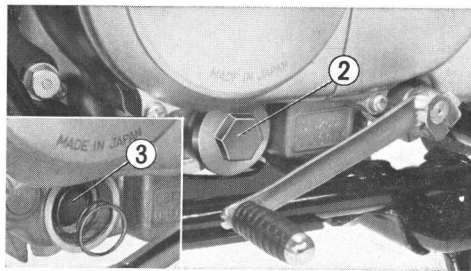

② Filter cap

③ Screen filter